

## RT-RR (Roller)

Mount Formula: RT-RR

### RT-RR

Roller Part Number	Mounting Spacing (mm)		Mount System (mm)		
	Top	Roll	W1	W2	L1
RT-RR-05	100	5	16	100	20
RT-RR-17	100	5	17	10	20
RT-RR-20	100	5	20	10.7	20
RT-RR-25	100	5	25	11	20
RT-RR-28	100	11	28	20	20
RT-RR-30	100	14	30	20.5	20

RT-RR Roller & RT-RR Spacers

#### Mounting Formula:

Mounting Spacing:  $RT-RR-05$  through  $RT-RR-30$

Mounting System:  $RT-RR-05$  through  $RT-RR-30$

Roller Part Number:  $RT-RR-05$  through  $RT-RR-30$

Roller Length: 20mm